




ABSOLUME

LED in more dimensions


LINEAR FLAT PANELS

Super-Narrow Frame Series | Lay-Ins


INSTALLATION DIAGRAM

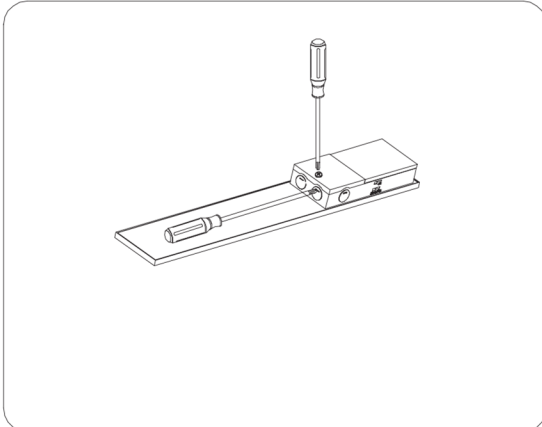


1. Open the driver junction box and knock off the quantity of knockouts needed.

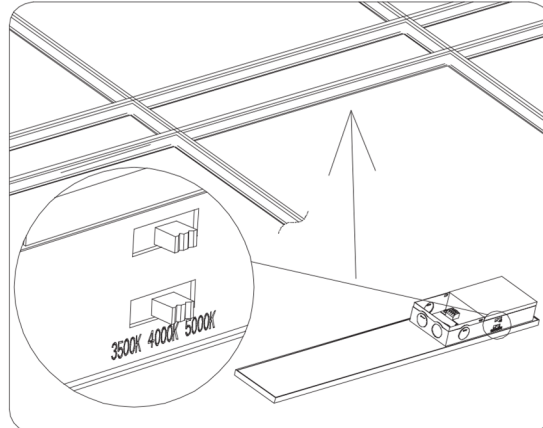


2. Switch the color temperature and power selector to the required setting and then push it into T box.

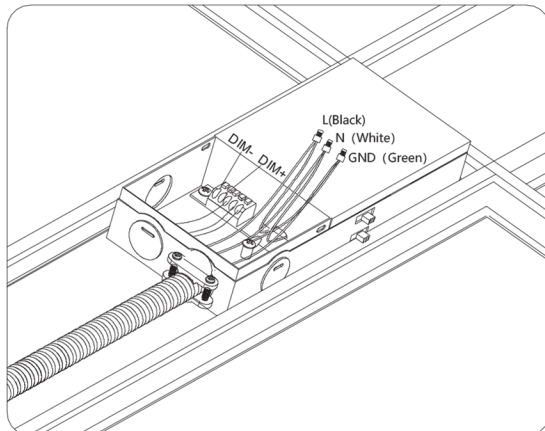

3. Connect the cable to the driver junction box as per labeling wire diagram. Connection Instruction: For dimming wires use the correct tools to press the terminal and pull the wires into the terminal and then release, connect AC wires and ground wires with rated wire nuts.

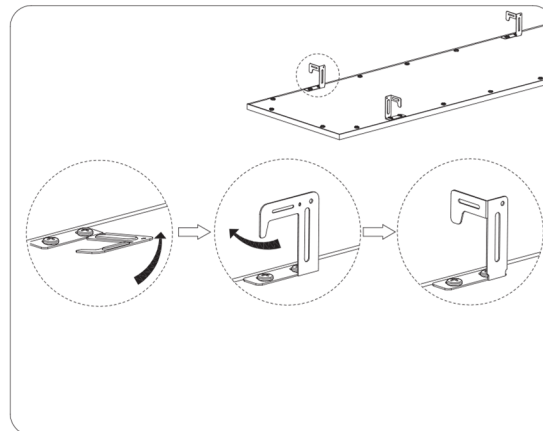

4. Rotate the clips, unbend the bracket, make it perpendicular to the lamp. Rotate the bracket by 90 degrees.

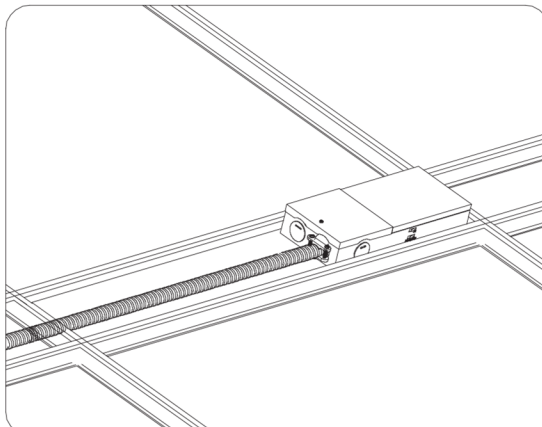

5. Fix the removed junction box cover, and installation is completed.